## AIRCRAFT DISPATCHER

## **UNIT 7 – IAMS/CAHIS**

### **STUDENT GUIDE**

## **UNIT OBJECTIVES**

- 1. Describe IAMS/CAHIS and its uses.
- 2. Identify IAMS/CAHIS users.
- 3. Obtain and update IAMS/CAHIS.

# **NOTES**

T	T	٨	T.	1	C		٨	TT	TC	0
1.	$\mathbf{L}$	4	ď١	VΙ	S)	'L.	А	П	IS	

II.

C.

D.

Military

A.	Initial Attack Management System
В.	IAMS/CAHIS decreases the workload of dispatchers in assessing aviation data.
C.	IAMS/CAHIS increases the speed and accuracy of obtaining aviation information, providing for increased safety and efficiency.
WHO	O SHOULD USE IAMS/CAHIS?
A.	Aviation Dispatchers
В.	Aviation Managers

Federal Aviation Administration

## III. WHERE DO I GET IAMS/CAHIS?

- http://www.nifc.blm.gov
- Click on "Aviation"

### IV. HOW DO I DOWNLOAD/UPDATE IAMS/CAHIS?

- A. Click on "Airbase Update Form"
- B. Click the "InstallShield Wizard" button to Install/Update
- C. Click the "Next" button
- D. Select "Install Now" then the "Install" button
- E. Click the "Finish" button

### V. IAMS/CAHIS TOOLBARS

A. Button Bar

### 1. Zoom In

Allows the user to "zoom into" an area of interest within the view (geographic area) that is displayed on the screen To zoom into a specific area provides a view with greater detail.

- Fixed Method
- Free Method

NOTE: The Zoom option can also be accessed through "Zoom" on the Menu Bar or Ctrl + Z.

### 2. Distance Tool

Allows the use to select a series of points within the view (geographic area) that is displayed on the screen; the distance between each point is shown, as well as the total distance NOTE: The Distance option can also be accessed through "*Tools*" on the Menu Bar or Ctrl + D.

## 3. Overlays

Allows the user to add, remove, and modify overlays The overlays are the features to display, such as BLM district boundaries, rivers, interstates, etc.

NOTE: The Overlays option can also be accessed through "Select" on the Menu Bar or Ctrl + O.

## 4. Display Parameters

Allows the user to modify the display parameters for the selected overlays

The display parameters are the attributes of the overlay and determine how the selected overlay will appear to the user when drawn.

Includes the scale, symbol, line, color, full, and label NOTE: The Display Parameters option can also be accessed through "*Select*" on the Menu Bar or Ctrl + P.

### 5. Mark Point

Allows the user to select a point on the map/view display by using the mouse

NOTE: The Mark Point option can also be accessed through "Aviation" on the Menu Bar or Ctrl + M.

Only one point can be marked at a time.

### B. Menu Bar

## 1. Settings Menu

Allows the user to set the startup and display options within IAMS/CAHIS

## • Short Help

Allows the user to turn the short help on or off

## • Legend

Allows the user to turn the legend on or off

The legend lists the selected overlays and the associated color and/or symbol for each.

The legend may not be needed in the office but is useful if printed and posted.

The legend can be moved using the click and drag procedure.

### • Scale Bar

Allows the user to turn the scale bar on or off The scale bar shows the linear distance of the current view.

Include if you are printing a map.

The scale will change with the zoom feature.

## Initial Map

Allows the user to identify the initial map; which is the map (or set of overlays) that will appear on the screen whenever the IAMS/CAHIS application is started

The last map saved is the map that will start up during the next IAMS/CAHIS launch.

### Initial View

Allows the user to identify the initial view; this is the view (or geographic area) that will appear on the screen whenever the IAMS/CAHIS application is started

### • Linear Units

Allows the user to select the measure of distance that will be displayed in the scale bar; either kilometers, statute miles, or nautical miles

Use nautical miles for aircraft dispatching.

### • Default Font

Allows the user to select the font that will be used for the text throughout the IAMS/CAHIS application; such as in the legend and scale bar

### • Screen Size

Allows the user to enter the width of their computer screen

### 2. Aviation Menu

Allows the user to select a point location on the map/view display and obtain aviation information from near that location

### Mark Point

Same as on the Button Bar

### • Enter Point

Allows the user to select a point by entering coordinated of the location

When "Enter Point" is selected, the Convert Coordinates dialog box from the Tools Menu is displayed.

## • Dispatch

Displays the dispatch information for the previously defined point

### Hazards

Displays the hazard information for the previously defined point

## Settings

Allows the user to set the search distances that are used for the Dispatch and Hazards options

The distance default is set to 99 NM.

### 3. Tools Menu

Allows the user to obtain information about locations, as well s create a TFR

### • Distance

Same as that on the Button Bar

### • Print Distance

Allows the user to print the Distance Results information from the previous session using the Distance tool

### • Enter/Edit TFR

Allows the user to create a new or edit an existing TFR

# • Organization Entity (OE)

Allows the user to enter or edit information about the user's "organizational entity" or office

Airport/Airbase

Allows the user to display airport and airbase information

• Aviation Boundaries

Displays a list of aviation boundary information

• Military Training Routes

Displays a list of MTR information

- Navigation Aids
   Displays a list of navigation aids information
- Special-Use Airspaces

Displays a list of SUA information

• Convert Coordinates

Same as discussed when entering a point

4. Zoom

Allows the user to change the geographic area that is displayed (the view).

### • Zoom In

Allows the user to magnify an area of interest with the view

### Recenter

Allows the user to center the view display on a new point—redraws the map

### • Recenter Active

Allows the user to center the view display on the current "active point"

## • Map Scale

Allows the user to select a new scale for the view

### Maximum

Allows the user to display the maximum area available to view—contiguous United States

## History

Identifies the previous views that have been displayed within the current IAMS/CAHIS session.

### 5. Select Menu

Allows the user to select the overlays, modify the display parameters, select the background color of the display, re-draw the display, and re-open the current map

## Overlays

Discussed previously under the Button Bar

## • Display Parameters

Discussed previously under the Button Bar

## • Background

Allows the user to change the color of the background of the IAMS/CAHIS screen display.

### Redraw

Clears the screen and then redraws the current map on the screen

## • Re-Open Current Map

Clears the screen and reopens the current map and draws it as if it was just defined.

## 6. Map Menu

Allows the user to create, open, save, or delete a map file (the set of overlays selected by the user), send the map or screen display to a printer, select the printer for printing the map or text, see the information about the version of the software, or exit IAMS/CAHIS

#### New

Opens a new map and allows the user to select overlays to create a new map

## • Open

Allows the user to open an existing map definition file, which is then displayed

### • Save As

Allows the user to save the current map

### • Delete

Allows the user to delete a selected map definition file

## • Print Map

Prints the displayed map/view, including the informational line at the bottom of the IAMS/CAHIS window

### • Print Screen

Prints the entire IAMS/CAHIS window

### • Select Map Printer

Sets the printing parameters that IAMS/CAHIS uses to print the map/view that is displayed

### • Select Text Printer

Sets the printing parameters that IAMS/CAHIS uses to print the text information that is displayed

# About Maps

Displays version number, release date, and comments

### • Exit

Closes the IAMS/CAHIS application and returns the user to the last accessed location in Windows

### 7. View Menu

Allows the user to create, open, save, or delete a view file (the geographic area that was selected by the user).

### New

Opens a new view, the Maximum view, which displays the entire area of the contiguous lower 48 United States

## • Open

Allows the user to open an existing view definition file, which is then displayed

### • Save As

Allows the user to save the current view

### Delete

Allows the user to delete a selected view definition file

### VI. EXERCISES

A. Exercise 1

### B. Exercise 2

- C. Exercise 3
- D. Exercise 4
- E. Exercise 5
- F. Exercise 6
- G. Exercise 7

An incomplete Aircraft Resource Order is provided for this exercise. As the ACDP, you have received the following request for aircraft: 2 Air tankers, 1 Lead plane, and 1 Air Attack.

- 1. Using the latitude and longitude from the Resource Order and IAMS/CAHIS, complete
  - Block 6
  - Block 11
    - Three VORs
    - Closest reload base
    - Other aircraft/hazards within 5 NM

2. Using IAMS/CAHIS, determine the closest force for each resource requested (default setting of 500 NM). Document the dispatch center of the closest resource in the TO/FROM box in Block 12.

3. Deconflict the airspace and create a TFR.

	RESOUR	RESOURCE ORDER	R	INITIAL DATE/TIME	2. INCIDENT/PROJECT NAME	/PROJECT	NAME	3. INCIE	DENT /PF	ROJECT OF	3. INCIDENT /PROJECT ORDER NUMBER	4. OFFI	4. OFFICE REFERENCE NUMBER	ERENCE - 400	NUMBE
	 AIR(	AIRCRAFT	 	7/13/00		GOLDRUSH	끘		Ž	NV-BMD-123	123		д 4 Х	P47123 N123	
ΓιΩ	5. DESCRIPTIV	5. DESCRIPTIVE LOCATION/RESPONSE AREA	//RESF	ONSE AREA	6. SEC.	TWN RNG	Base MDM		DENT BA	8. INCIDENT BASE/PHONE NUMBER	NUMBER	9. JUR	ISDICTIO B	9. JURISDICTION/AGENCY BLM	λ:
	Austin, NV	> Z			7. MAP REFERENCE	ERENCE			77	775 555-1234	234	10. ORI	10. ORDERING OFFICE CNC	OFFICE CNC	
τ-	11. AIRCRAFT	11. AIRCRAFT INFORMATION	N N	LAT. 39 38	LAT.	39 38		LONG.		116 45					
	BEARING	DISTANCE		SE OR OMNI	AIR CONTAC	ST FREQI	UENCY	Ground Contact		FREQUENCY	CY RELOAD BASE	$\vdash$	HER AIR	OTHER AIRCRAFT/HAZARDS	AZARD
					Goldrush A/A		123.456	Goldrush IC	2	170.00					
12. Request Number	Ordered Date/Time	0 - ×	_	FESOURCE REQUESTED		Needed Date/Time	Deliver To	Ot of the	Time +	Agency F	RESOURCE ASSIGNED	1 1	R CLITA Pa	RELEASED Date To	THE
A-1				AIR TANKER	ŒR	⊴	FIRE								
													<u> </u>		
A-2		_		AIR TANKER	ŒR	⋖	FIRE								
A-3		_		LEAD PLANE	NE	⋖	FIRE								
A-4		_		AIR ATTACK	ÖK	⊴	FIRE								
_	🛱 –	ELAYED Tolling	8		ACTION TAKEN	AKEN		_	ORDE	ORDER RELAYED			ACTION TAKEN	TAKEN	
	Date		5					Ned. No.	Da G	D = =					

# **NOTES**

- 1. Using the Township/Range/Section from the Resource Order and IAMS/CAHIS, complete
  - Block 11
    - Three VORs
    - Closest reload base
    - Other aircraft/hazards within 5 NM
- 2. Using IAMS/CAHIS, determine the closest force for each resource requested (default setting of 500 NM). Document the dispatch center of the closest resource in the TO/FROM box in Block 12.
- 3. Deconflict the airspace and create a TFR.

				DAI E/IIME									L	20077		777
	AIR(	AIRCRAFT	] 	7/13/00 1300	ά	Reveille			Ź	NV-BMD-125	)-125		<b>-</b>	P47 1235 N125	0	
5.	DESCRIPTI	5. DESCRIPTIVE LOCATION/RESPONSE AREA	RESP		6. SEC. TWN 02 20N	RNG 46E	Base MDM M		IDENT B/	8. INCIDENT BASE/PHONE NUMBER	VE NUMB		9. JURISDICTION/AGENCY BLM	TION/AGE BLM	NCY	
	Kevelle	Keveille Kange			122	RENCE			77	775 555-1234	1234		10. ORDERING OFFICE CNC	NG OFFICE		
=	I. AIRCRAFT	11. AIRCRAFT INFORMATION	NC		LAT.			LONG.								
Ш	BEARING	DISTANCE	Н	SE OR OMNI	BASE OR OMNI AIR CONTACT FREQUENCY	T FREQU	JENCY	Ground Contact	Contact	FREQUENCY	П	RELOAD BASE	OTHER,	OTHER AIRCRAFT/HAZARDS	'HAZARI	
					Reveille A/A		123.456	Reveille IC	<u>0</u> <u>C</u>	170.00	00					
$\dashv$		$\mid \mid \mid \mid$	╟.			- - - :			T		+					6
Request Number	Ordered Date/Time	3 ->		RESOURCE REQUESTED		Needed Date/Time	Deliver To	OT LEON	Time	Agency ID	RESOU	RESOURCE ASSIGNED	altu-	RELEAS Date	$\tilde{1}$	all the
A-1				AIR TANKER	ËR	⊴	FIRE									
																Н
A-2		_		AIR TANKER	ER	⊴	FIRE									H
																Ц
																Ш
A-3		_	<u> </u>	EAD PLANE	NE	⊴	FIRE									H
																H
A-4		_		AIR ATTACK	S S	⊴	FIRE									
																Ш
																H
_	ORDER RELAYED	ELAYED Tolling	8		ACTION TAKEN	AKEN		-	ORD	ORDER RELAYED			ACT	ACTION TAKEN	_	
100	Date		5					Ned. NO.	Cafe	<u> </u>	10L/01	=				

- 1. Using the VOR from the Resource Order and IAMS/CAHIS, complete
  - Block 6
  - Block 11
    - Closest reload base
    - Other aircraft/hazards within 5 NM
- 2. Using IAMS/CAHIS, determine the closest force for each resource requested (default setting of 500 NM). Document the dispatch center of the closest resource in the TO/FROM box in Block 12.
- 3. Deconflict the airspace and create a TFR.

_	RESOURCE ORDER	CE ONDE	DATE/TIME								7674736	74005	
	AIRC	AIRCRAFT	7/13/00		ALKALI			OR	OR-DOF-345	345	, G	P6/1235 Q125	
(1)	. DESCRIPTIV	VE LOCATION/F	5. DESCRIPTIVE LOCATION/RESPONSE AREA	6. SEC.	TWN RNG	Base MDM		ENT BA	8. INCIDENT BASE/PHONE NUMBER	NUMBER	9. JURISDICTION/AGENCY State	ON/AGENCY State	
	ALKALI LAKE	LAKE		7. MAP REFERENCE	ERENCE			619	619 555-2345	345	10. ORDERING OFFICE BIC	OFFICE BIC	
	11. AIRCRAFT	11. AIRCRAFT INFORMATION		LAT.			LONG.						
	BEARING	DISTANCE	BASE OR OMN	BASE OR OMNI AIR CONTACT FREQUENCY	CT FREQU	JENCY	Ground Contact		FREQUENCY	CY RELOAD BASE		OTHER AIRCRAFT/HAZARDS	ARDS
	17	43	LK	Alkali A/A		123.456	Alkali IC		170.00				
Request Number	Ordered Date/Time	O ->	RESOURCE	RESOURCE REQUESTED -	Needed Date/Time	Deliver To	of the	Time	Agency RI	RESOURCE ASSIGNED	Pata	RELEASED Date To	all the
A-1		_	AIR TANKER	KER	₹	FIRE							
A-2			AIR TANKER	KER	⋖	FIRE							
A-3		_	LEAD PLANE	ANE	⋖	FIRE							
A-4		_	AIR ATTACK	ACK	₹	FIRE							
13. Reg. No.	ORDER RELAYED Date   Time	ELAYED To/From		ACTION TAKEN	AKEN		Red No	ORDE Date   T	ORDER RELAYED	) To/From	ACTION	ACTION TAKEN	
	<del>     </del>						-						
$\dagger$													
	_												

- 1. Using the latitude and longitude from the Resource Order and IAMS/CAHIS, complete
  - Block 6
  - Block 11
    - Three VORs
    - Closest reload base
    - Other aircraft/hazards within 5 NM
- 2. Using IAMS/CAHIS, determine the closest force for each resource requested (default setting of 500 NM). Document the dispatch center of the closest resource in the TO/FROM box in Block 12.
- 3. Deconflict the airspace and create a TFR.

_	RESOUR	RESOURCE ORDER	R DATE/TIME	2. INCIDENT/PROJECT NAME	PROJECT	NAME	3. INCIDI	ENI /PR	OJECT ORDI	3. INCIDENT /PROJECT ORDER NUMBER	4. OFFICE REFERENCE NUMBER DE1301	EFERENCE   DE/1301	NUMBER
	AIR	AIRCRAFT	7/13/00	SHIN	SHINN MNT	늘		CA	CA-PNF-119	19		F34321 D321	
اس	. DESCRIPTI	VE LOCATION/R	5. DESCRIPTIVE LOCATION/RESPONSE AREA	6. SEC. TWN	RNG	Base MDM		ENT BA	8. INCIDENT BASE/PHONE NUMBER	UMBER	9. JURISDICTION/AGENCY FS	TION/AGENG FS	\ <u>\</u>
	Shinn N	Shinn Mountain		7. MAP REFERENCE	RENCE			619	619 213-4567	1	10. ORDERING OFFICE SIC	G OFFICE SIC	
	11. AIRCRAFT	11. AIRCRAFT INFORMATION		LAT.	40 17		LONG.		120 04	-			
	BEARING	DISTANCE	BASE OR OMNI	AIR CONTACT FREQUENCY	T FREQU	JENCY	Ground Contact	$\Box$	FREQUENCY	Y RELOAD BASE	Ш	OTHER AIRCRAFT/HAZARDS	AZARDS
				Shinn A/A	123	123.456	Shinn IC		170.00				
Request		O -	RESOURCE REQUESTED		Needed	Deliver	L	Time	Agency RES	RESOURCE ASSIGNED		RELEASED	OTHING AND
Number	Date/ IIIIe	\$		ם	Date/Time	0	(0,1)	$\neg$ †			$\rightarrow$	Date To	$\dashv$
A-1		~	AIR TANKER	(ER	⋖	FIRE							
A-2		_	AIR TANKER	(ER	⊴	FIRE							
A-3		_	LEAD PLANE	4NE	⊴	FIRE							
A-4		~	AIR ATTACK	Ś	⊴	FIRE							
13. Req. No.	ORDER RELAYED Date   Time	ELAYED	<u></u>	ACTION TAKEN	KEN		Reg. No.   D	ORDEI Date   T	ORDER RELAYED  e   Time 1	To/From	ACTI	ACTION TAKEN	
							-						
								+					

- 1. Using the Township/Range/Section from the Resource Order and IAMS/CAHIS, complete
  - Block 11
    - Three VORs
    - Closest reload base
    - Other aircraft/hazards within 5 NM
- 2. Using IAMS/CAHIS, determine the closest force for each resource requested (default setting of 500 NM). Document the dispatch center of the closest resource in the TO/FROM box in Block 12.
- 3. Deconflict the airspace and create a TFR.

AIRCRAFT 1300 5. DESCRIPTIVE LOCATION/RESPONSE AREA MIII Creek, CA  11. AIRCRAFT INFORMATION BEARING DISTANCE BASE OR OMNI BEARING DISTANCE BASE OR OMNI A-1 1 AIR TANK A-2 1 LEAD PLA A-4 1 AIR ATTA				
Fequest Ordered CA BEARING DISTANCE BASE OR OMNI CAS INTERPRED DISTANCE BASE OR OMNI CAS INTERPRED DISTANCE RESOURCE RES	MILL CREEK	ට 	CA-LNF-0444	7.04441 R441
Request Ordered (2007)  A-2  A-3  A-4  A-4  A-4  A-4  A-4  A-4  A-4	EC. TWN RNG Base MDM 26 28N 8E		8. INCIDENT BASE/PHONE NUMBER	9. JURISDICTION/AGENCY FS 10. ORDFRING OFFICE
Request Ordered (**Off) T. AIR TANK A-2 A-3 T. LEAD PLA A-4 T. AIR ATTA	7. MAP REFERENCE		619 213-4567	LNF
Request Ordered (100 A) A-2 A-3 A-3 A-4 A-4 A-4 A-4 A-4 A-4 A-7 A-8 A-7 A-8 A-4 A-4 A-4 A-4 A-7 A-8	1000	LONG.	XONLITOLOU	
Request Ordered (1) The Sounce Resource	AIR CONTACT FREQUENCY	Ground Contact	FREQUENCY RELOAD BASE	OTHER AIRCRAFT/HAZARUS
A-2 A-4	Mill Creek A/A 123.456	Mill Creek IC	170.00	
A-3 A-4 1 A-4		,		
	ESTED Needed Deliver To Date/Time	40 Time	Agency RESOURCE ASSIGNED ID	ED CLAY RELEASED THREE Date TO CLAY
	A IA FIRE			
7 - L	A FIRE			
T PI				
1 Ali				
-	E IA FIRE			
~				
	( IA FIRE			
ORDER RELAYED	ACTION TAKEN	-	ELAYED	ACTION TAKEN
		Ney, NO.		

- 1. Using the VOR from the Resource Order and IAMS/CAHIS, complete
  - Block 6
  - Block 11
    - Closest reload base
    - Other aircraft/hazards within 5 NM
- 2. Using IAMS/CAHIS, determine the closest force for each resource requested (default setting of 500 NM). Document the dispatch center of the closest resource in the TO/FROM box in Block 12.
- 3. Deconflict the airspace and create a TFR.

1				DAIE/IIME										00001	
	AIRC	AIRCRAFT	[ [,	7/13/00 1300	STIL	STILLWATER	ER		Ž	NV-CCD-0012	-0012		L	F4/222 K222	
57.	. DESCRIPTIV	VE LOCATION	//RESF	5. DESCRIPTIVE LOCATION/RESPONSE AREA	6. SEC. TWN	RNG	Base MDM		DENT B/	8. INCIDENT BASE/PHONE NUMBER	IE NUMB		9. JURISDICTION/AGENCY BLM	TION/AGEN BLM	ICY
	Stillwate	Stillwater Mountains	ins	•	7. MAP REFERENCE	RENCE			77	775 861-6355	6355	1	10. ORDERING OFFICE SFC	G OFFICE SFC	
Ι-	1. AIRCRAFT	11. AIRCRAFT INFORMATION	NO.		LAT.			LONG.				_			
	BEARING	DISTANCE		BASE OR OMNI AIR CONTACT FREQUENCY	AIR CONTAC	T FREQU	JENCY	Ground Contact	Contact	FREQUENCY		RELOAD BASE	OTHER A	OTHER AIRCRAFT/HAZARDS	HAZARD
	111	29		LLC	Stillwater A/A		123.456	Stillwater IC	2 IC	170.00	00				
T sellipes		WOY	a   a	RESOURCE REQUESTED		Needed	Deliver	\$	9 E	Agency		DESCRIBE ASSIGNED	\ <u>`</u>	RELEASED	Ě
Number	Date/Time	\$		NESCONCE N	<b>'</b>	Date/Time	2	WOJJ		, 	RESOU	RCE ASSIGNED		Date To	
A-1				AIR TANKER	Ë R	⊴	FIRE								
A-2		_		AIR TANKER	ËR	⊴	FIRE								
A-3			<u>一</u>	EAD PLANE	NE	⊴	FIRE								
A-4		_		AIR ATTACK	S S	⊴	FIRE								
13. Reg. No.	ORDER RELAYED Date   Time	ELAYED  To/From	rom		ACTION TAKEN	4KEN		Red. No.	ORDI Date	ORDER RELAYED e   Time	'ED To/From	uc uc	ACTIC	ACTION TAKEN	
	+							+ +							
							_								

- 1. Using the latitude and longitude from the Resource Order and IAMS/CAHIS, complete
  - Block 6
  - Block 11
    - Three VORs
    - Closest reload base
    - Other aircraft/hazards within 5 NM
- 2. Using IAMS/CAHIS, determine the closest force for each resource requested (default setting of 500 NM). Document the dispatch center of the closest resource in the TO/FROM box in Block 12.
- 3. Deconflict the airspace and create a TFR.

<u> </u>	ESCUR	KESOURCE ORDER		DATE/TIME	Z. INCIDEN I/PROJECT INAIME		NAME	ω  	DEN /P.	ROJECT	OKDEK r	3. INCIDENT /PROJECT ORDER NUMBER 4.	4. OFFICE REFERENCE NUMBER DE6346	REFEREN DE621	CE NUM	BER
	AIRC	AIRCRAFT	I I .	7/13/00 1300	LIVE	LIVERMORE	<b>%</b>		S	CA-SCU-0515	-0515			F36343 U345	n	
5. 1	DESCRIPTIV	5. DESCRIPTIVE LOCATION/RESPONSE AREA	/RESP	ONSE AREA	6. SEC. TWN	RNG	Base MDM		IDENT B/	8. INCIDENT BASE/PHONE NUMBER	VE NUMB		9. JURISDICTION/AGENCY State	CTION/AG State	ENCY	
	Livermore, CA	re, CA			7. MAP REFERENCE	RENCE			70	707 615-5432	-5432		10. ORDERING OFFICE NO	ING OFFIC	SE	
1	. AIRCRAFT	11. AIRCRAFT INFORMATION	NC		LAT.	37 40		LONG.		121 32						
	BEARING	DISTANCE	H	BASE OR OMNI	AIR CONTACT FREQUENCY	T FREQU	JENCY	Ground Contact	Contact	FREQUENCY	$\Box$	RELOAD BASE	OTHER	OTHER AIRCRAFT/HAZARDS	:T/HAZAI	RDS
					Livermore A/A		123.456	Livermore IC	De IC	170.00	00					
Request Number	Ordered Date/Time	O L >	$oxed{oxed}$	RESOURCE REQUESTED		Needed Date/Time	Deliver To	OF UNDALLY	Time	Agency	RESOUI	RESOURCE ASSIGNED	que	RELEASED Date To		elli ti
A-1		_		AIR TANKER	ËR	⋖	FIRE									
																Н
A-2		_		AIR TANKER	ER	₹	FIRE									
																H
A-3		_	<u>                                     </u>	EAD PLANE	\NE	₹	FIRE									Н
																H
A-4		_		AIR ATTACK	충	⋖	FIRE									
																Ц
13. Bog No	ORDER RELAYED	ELAYED To/Erom			ACTION TAKEN	AKEN			ORDI	ORDER RELAYED	YED		ACT	ACTION TAKEN	Z	
	+										5	5				
							_	_	_							